

Instructions

Flowerpot VP9 Verner Panton 1968



Please read these instructions carefully and retain them for future reference to ensure that the product is used correctly. For your own safety, please study each step of this instruction manual first. &Tradition is not responsible for any faults or damages caused by not following these instructions correctly. Do not modify this product in any way. If you have any questions or comments, please do not hesitate to contact us by mail on: info@andtradition.com andtradition.

&Tradition®



Safety precautions

- This product is designed for indoor use. While it can be taken outdoors temporarily, it must not be left outside for extended periods and should always be stored indoors.
- Keep packaging out of reach of children.
- Always supervise children when using this lamp. It is not a toy.
- Avoid using or storing in humid or wet environments.
- Keep the product and battery away from prolonged sunlight, heat sources, and flammable objects.
- Do not modify the product in any way.
- Regularly inspect the lamp, cable, and battery for damage. Stop using immediately if they feel hot, emit unusual odors, or show visible damage (e.g., swelling, cracks, leakage) and contact info@andtradition.com
- Dispose of the product and batteries in accordance with local environmental regulations.
- &Tradition will not take any responsibility for accidents or injuries that occurs due to use of incorrect battery/LED light bulb.
- Always turn the product off before removing the light source or conducting any maintenance or care.

Charging and battery safety

- This product contains a lithium-ion battery. Improper handling may cause fire, explosion, or injury, handle with care.
- Use only the provided charging cable.
- Cable must be charged in 5V, max 2A adapter.
- Always charge the product indoors.
- Do not leave the product charging unattended.
- Disconnect the charger once the product is fully charged.
- Keep charging cables out of reach of children.
- Avoid running the cable across walkways.
- Recommended to replace the battery every 5 years.

&Tradition replacement battery, cable or LED unit can be purchased upon request.

Input 5.0V === 2A charging cable
Max 3 Watt dimmable LED board (replaceable)

Charging time: 8 hours

Operating time in highest light setting: 10 hours

 
Flowerpot VP9

Verner Panton

1968

Contents

- A Flowerpot lamp
- B Charging cable

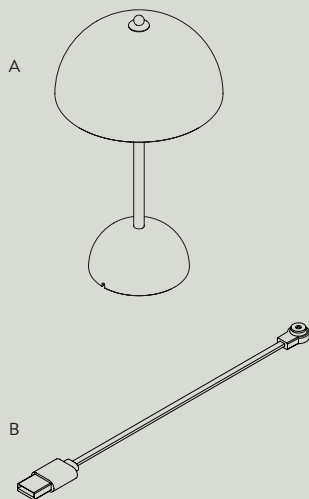


Cleaning instructions

- Wipe the surface with a soft, damp sponge or cloth, and wipe immediately with a dry cloth.
- Do not use any abrasive cleaning tools such as steel wool, scouring sponges or stiff brushes.
- Never use strong cleaning agents such as white spirit, turpentine, household glass cleaner or cellulose thinner.

Please follow step 1 – 4

Step 1

 The lamp is delivered fully assembled.

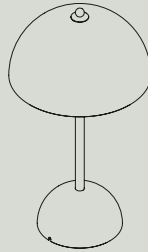


Step 2

Before use, the battery in the lamp must be fully charged.


Attach the magnetic charging cable to the charging port located on the bottom of the lamp. Connect the USB cable to a power supply.

 &Tradition replacement battery can be purchased upon request.

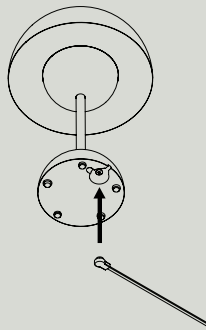


Step 3

 When charging, a red LED light will appear next to the charging port. When the lamp is fully charged the red light will turn green.

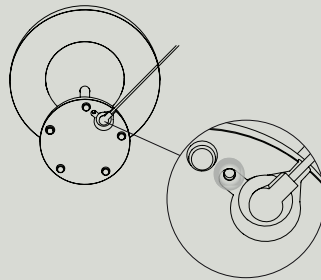

Step 4

 The light intensity of the lamp can be adjusted by touching the dimmer knob on the top of the lamp. The lamp has 3 light intensity levels: 100%, 50% and 20%.

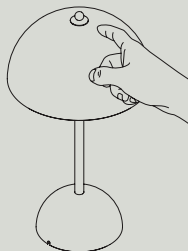

&Tradition replacement LED unit can be purchased upon request.

&Tradition®

