

## Product Specifications

Shupatto Products	Size	Weight of the product	Volume	Capacity	Materials	Functions
Packable Bag 8L	 <p>15.4in / 39cm</p> <p>8.3in / 21cm</p> <p>2.4in / 6cm</p> <p>2in / 5cm</p> <p>2.8in / 7cm</p>	50g	8L	6.6lb / 3kg	Bag / Polyester (Water repellent) Handle / Polyester	Water repellent 
Packable Bag 27L	 <p>18.1in / 46cm</p> <p>11in / 28cm</p> <p>2.4in / 6cm</p> <p>3.1in / 8cm</p> <p>3.9in / 10cm</p>	122g	27L	22lb / 10kg	Bag / Polyester (Water repellent) Handle / Polyester	Water repellent 
Insulated Bag 20L	 <p>16.5in / 42cm</p> <p>10.2in / 26cm</p> <p>2.8in / 7cm</p> <p>3.5in / 9cm</p> <p>4.7in / 12cm</p>	184g	20L	22lb / 10kg	Bag (Outside) / Polyester Bag (Inside) / Aluminum, Metallized Film Handle / Polyester	Water repellent  Basic insulation 

Made in China

 
## How to Fold

### For Packable Bag 8L & 27L


1. Hold the tapes of both ends and ...



2. Pull!



 3. Fold into half twice

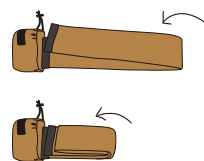

4. Roll it up and store it in the attached pouch




### For Insulated Bag 20L

 
1. Hold the tapes of both ends and ...



2. Pull!

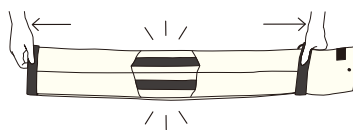

 3. Fold into half three times

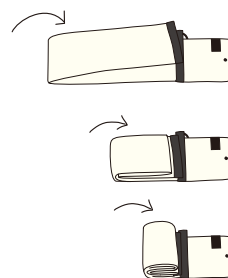


4. Close the button



■Caution for Use & Care Instructions

For Packable Bag 8L & 27L

 - Do not hang this bag too long, with heavy objects in.
- This bag can be damaged when dragged and with sharp objects in.
- Some color loss on this bag may be caused when it has just begun to be used and when contacting with wet objects.
- Use this bag only for its designed purpose.
- Fold this bag down immediately after being used.
- When the pleats of this bag are not folded down well, place it flat after shaping as shown in \*1 and leave it as is for a while.
- If the bag gets dirty, dip a soft cloth into a synthetic detergent (laundry detergent, soap, etc.) diluted with water, tightly wring the cloth, and then wipe the surface of the bag by tapping.
- **Laundering will remove the water repellent finish. After laundering, use a commercial water repellent spray.**
- **To launder, wash separately in a net (delicate wash cycle).**
- Do not use chlorine bleach, fabric softener, a dryer and an electric iron on this bag. Also, avoid soak washing. After finished washing, place it flat after shaping as shown in \*2 and dry it in the airy shade.

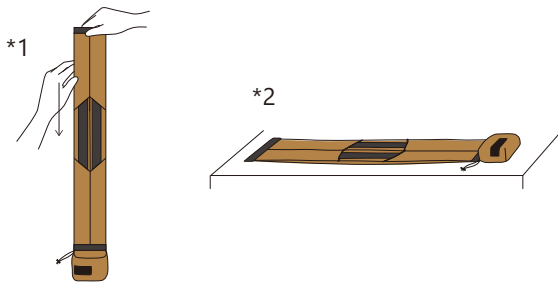

For Insulated Bag 20L

- This is a simple insulated bag; do not leave food in the bag for a long period of time. The food could spoil.
- The insulating effect varies depending on the usage conditions.
- The bag is not waterproof. Be aware that the inside and outside of the product could become wet during use.
- If moisture remains, mold could form. Dry the bag thoroughly after use.
- Do not use the bag near an open flame or in high temperatures.
- Do not hang this bag too long, with heavy objects in.
- This bag can be damaged when dragged and with sharp objects in.
- Some color loss on this bag may be caused when it has just begun to be used and when contacting with wet objects.
- Use this bag only for its designed purpose.
- **Do not wash.**
- If the bag gets dirty, dip a soft cloth into a diluted synthetic detergent (laundry detergent, soap, etc.), tightly wring the cloth, and then wipe the surface of the bag by tapping.
- Fold this bag down immediately after being used.
- When the pleats of this bag are not folded down well, place it flat after shaping as shown in \*1 and leave it as is for a while.

